


Filter Replacement Guide

It is recommended that you replace the filter when the water filter indicator light turns on or your water dispenser or ice maker decreases noticeably.



After change the water filter cartridge, reset the water filter status display and indicator light by pressing and holding the RESET for 3 seconds.

1. Remove an Old Cartridge.
Rotate the nob of cartridge counterclockwise.

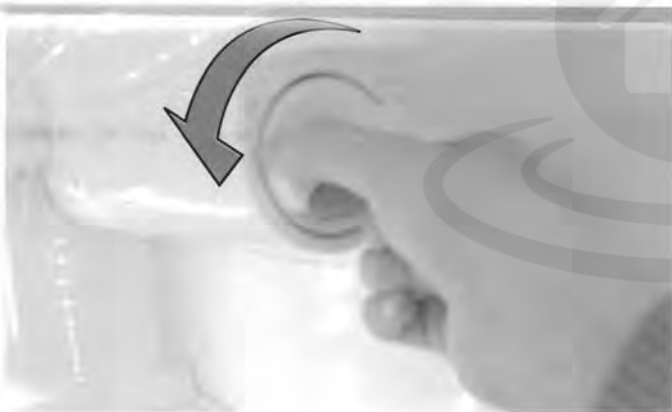

When the cartridge is separated, you will see that the cartridge slightly come out and hear a snap.

Pull out the cartridge



NOTE : There will be water in the cartridge.
Some spilling may occur.

2. Replace a New Cartridge.
Take the new cartridge out of its packaging and remove protective cover from o-rings.

With cartridge nob in the vertical position, push the new filter cartridge into the cover until it stops.



Roll the filter cartridge with pushing for correct insert position of the cartridge.

Rotate the nob of cartridge clockwise about 1/4 turn. You will feel a stop.



3. Flush the water system after replacing the filter cartridge through the water dispenser for 5minutes to purge the system.